How to mount bump fire trigger on Tjep ES-500/40

1. How to change to bump fire trigger

2. Remove the first pin

3. Remove the second pin

4. Unscrew the first screw on the front of the nose cover

5. Unscrew the second screw on the front of the nose cover

6. Draw the magazine downwards

7. Remove the trigger

8. Keep the plunger head cap in place

9. Mount the bump fire trigger

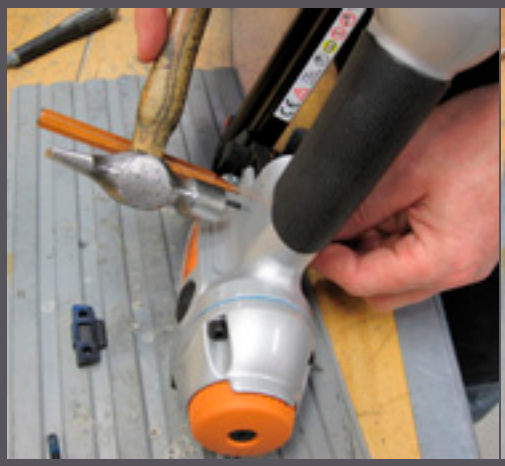

10. Use a punch to keep the trigger aligned, and insert the first pin

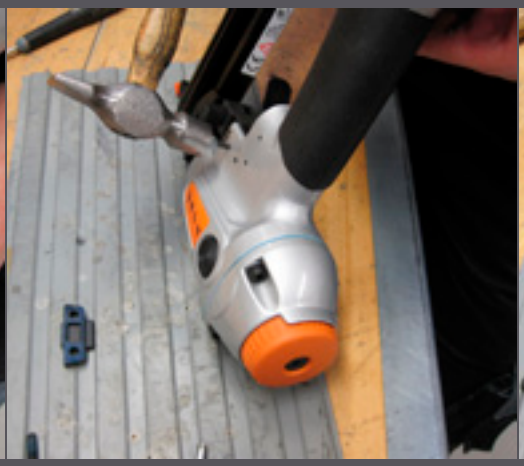

11. Insert the second pin

12. Mount the spacer

13. Turn and tighten the first screw on the nose cover

14. Turn and tighten the second screw on the nose cover

15. The bump fire trigger is now mounted